

CONNECT 120 REVERSE ARGB

MANUAL

BELIEVE IT

www.Antec.com


All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V2.2


©1986 – 2024 Antec Inc. All rights reserved.

1 CONTENTS


120MM FAN

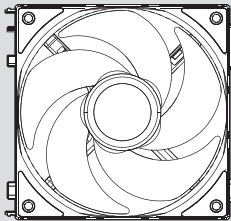

4-PIN PWM & 3-PIN ARGB CABLE

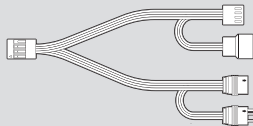


FAN COVER

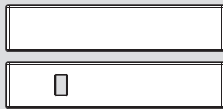

FAN SCREW




RADIATOR SCREW

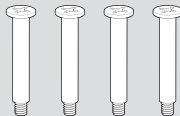


2 FAN INTRODUCTION

*Reverse Fan

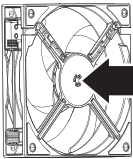


AIR-IN

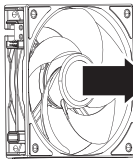


AIR-OUT

3 FAN DIMENSIONS

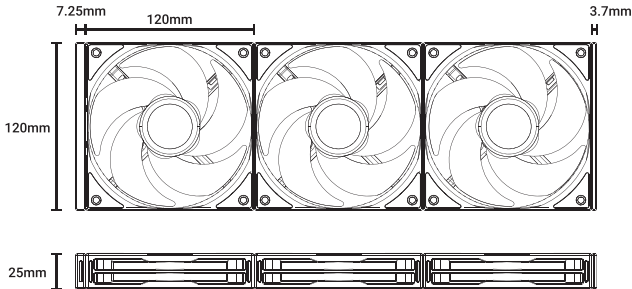


4 FAN INSTALLATION


- Connect the fans

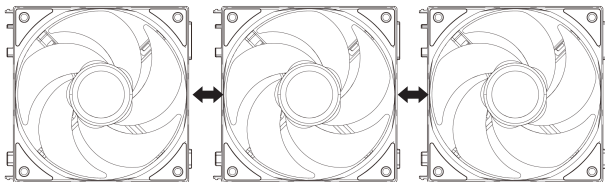


- Install fan covers

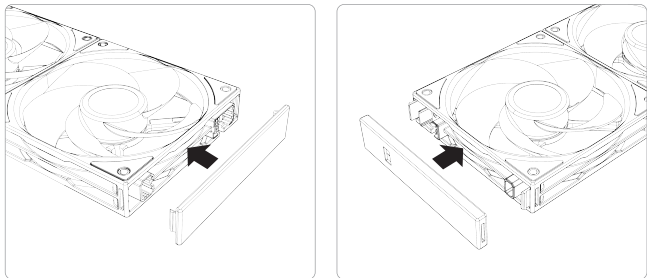

- Install on the chassis with less screws

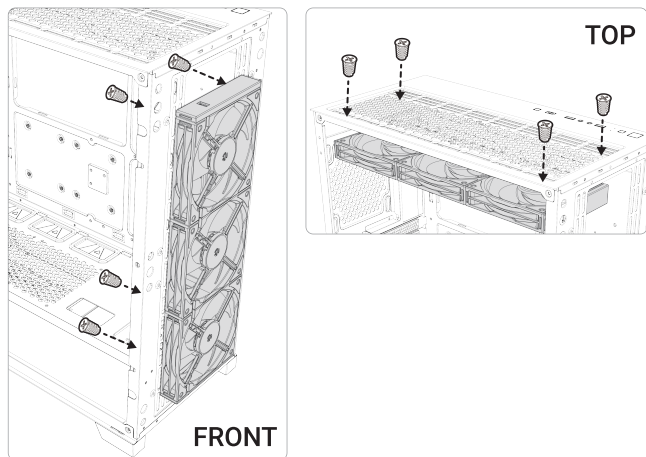


- Install on the radiator with less screws

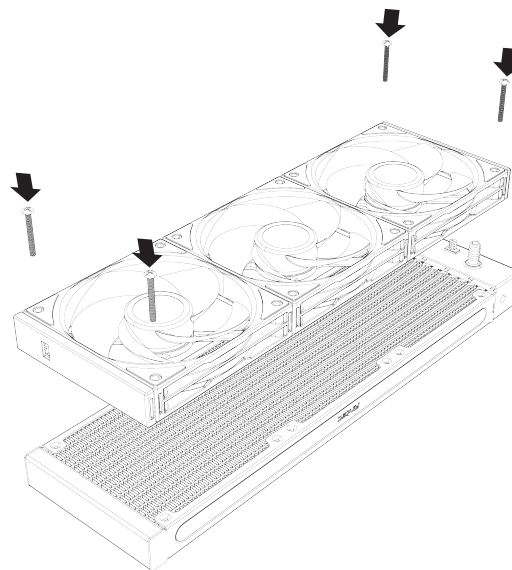

5 FAN CONNECTION

- Connect the cable

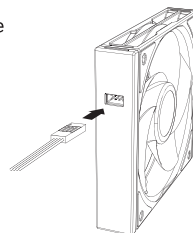

- Connect to the motherboard

