

260709 - Antec F620 Digital Pro - Manual

紙材 | 銅版紙100g

加工 | 沿虛線對摺

色號 | K100

尺寸 | 297mm*210mm

297mm

正面

210mm

Antec

F620 DIGITAL PRO

INSTALLATION GUIDE

BIOS Configuration

- If the "CPU FAN ERROR" message appears in the UEFI BIOS, please adjust the CPU Fan Speed Low Limit setting.
- ※ Settings may vary depending on your motherboard model. Please refer to your motherboard manual for details.

Before Installation & Caution during Installation

- It is recommended to clear enough workspace before installing this product and wear gloves to prevent injury during installation.
- Please keep this product and accessories away from children.
- To prevent injury, please be careful as the edges of components inside your system may be sharp.

www.Antec.com

© 2026 Antec, Inc. All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations.
Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

Made in China / 中國製造 / 中国製造

PART LIST

1 CPU Cooler *1
(Include: Fan *2, Fan Clips *4)

2 Intel Backplate *1
General Bracket *1

3 Install Screws
For Intel

4 Install Screws
For Intel 20XX

5 Install Screws
For AMD

6 Thermal Paste *1

INTEL LGA 115X (1200) / 1366 / 17XX (1851) / 20XX

1.

First, place the plastic spacers onto the backplate bolts. The four mounting positions are adjustable.

Insert Position
LGA 115X
(1200)

Insert Position
LGA 17XX
(1851)

Insert Position
LGA 1366

2.


Install the bracket.
Intel LGA 115X(1200) / 1366 / 1700(1851)

Install the bracket.
Intel LGA 20XX



No backplate installation required

LGA 1366
LGA 1700(1851)
LGA 115X(1200)


背面

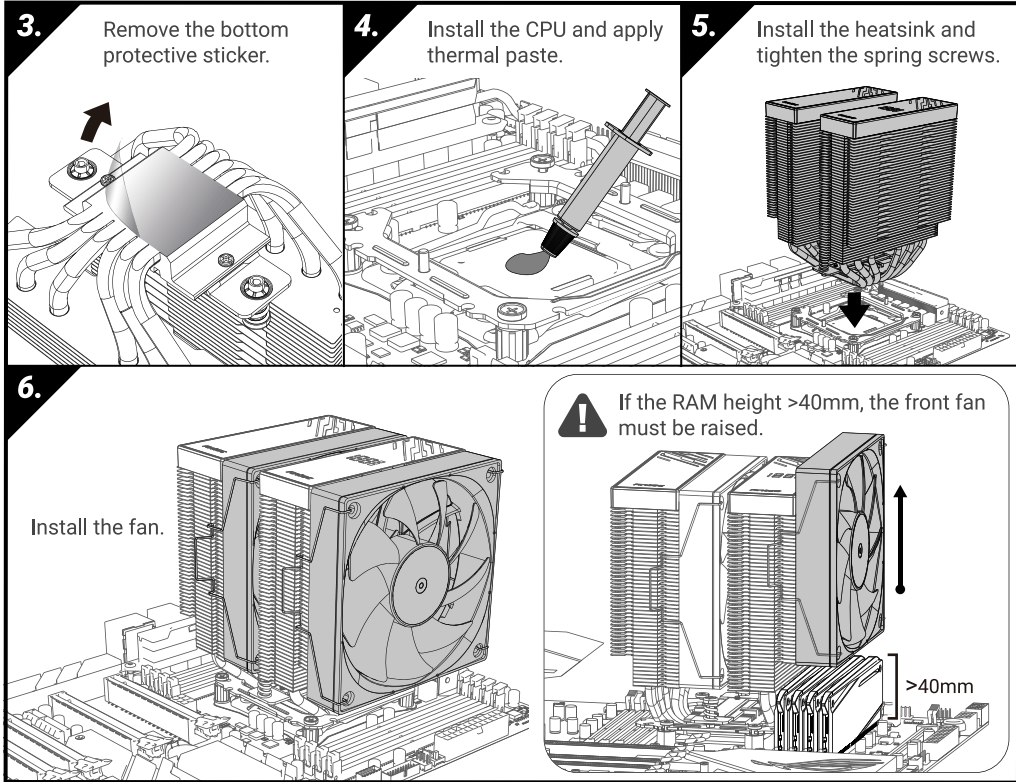

AMD AM4 / AM5

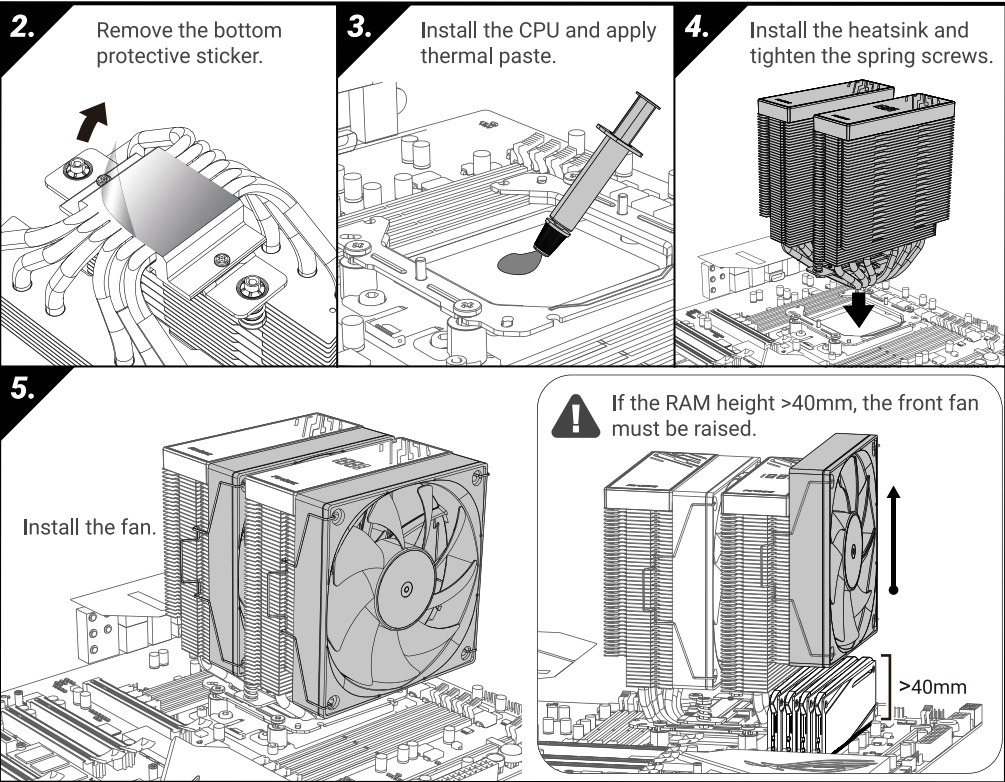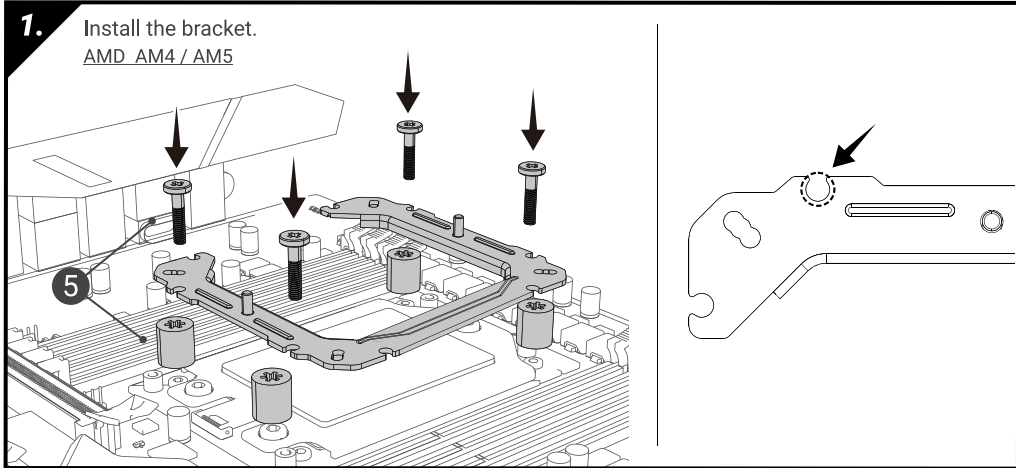

CABLE CONNECTION

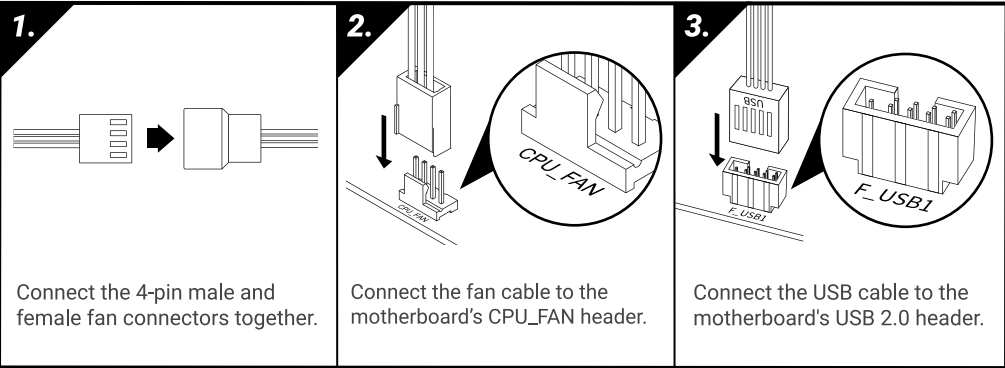

Download the Antec software to access your digital display preferences.