




Installation Manual

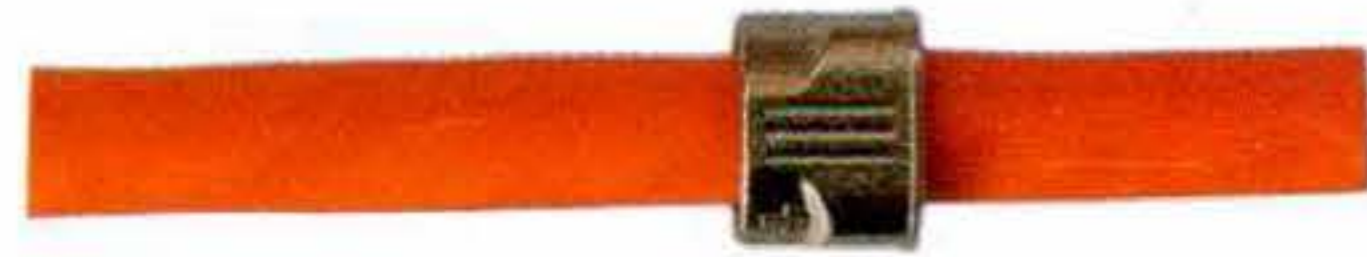


1、 Thread the nut on the cable.

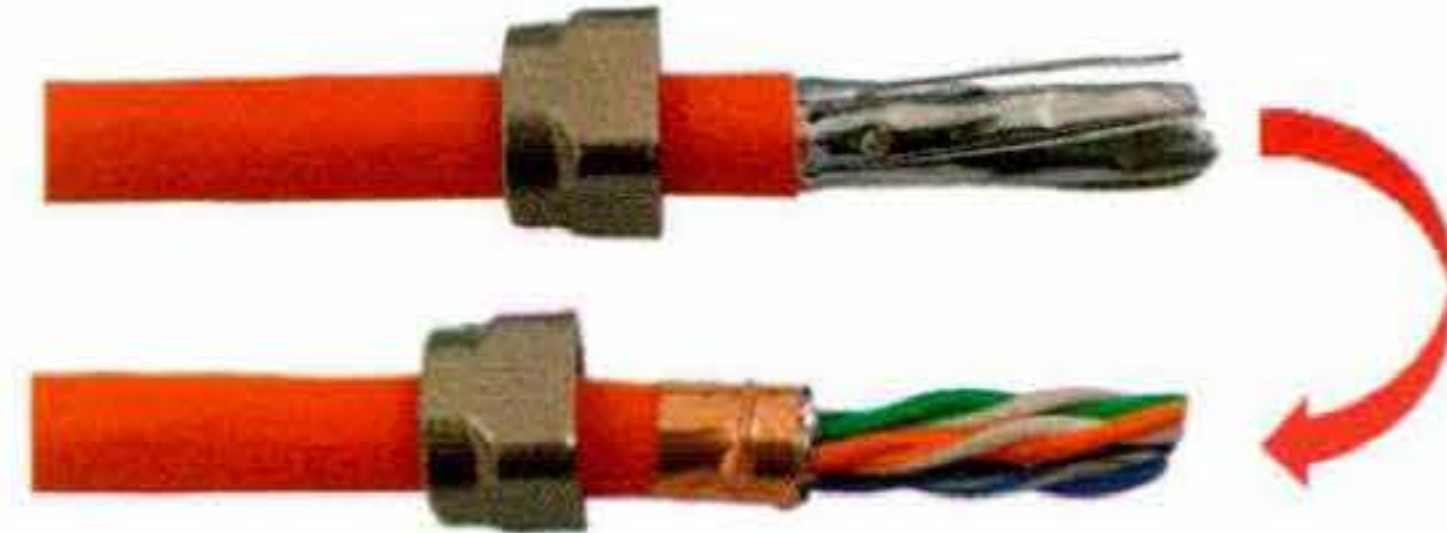

2、 Strip off the cable protective cover by about 20mm; Cut off the shielding layer of the cable pair, bend the cable shielding wire backwards and wrap it with copper foil.

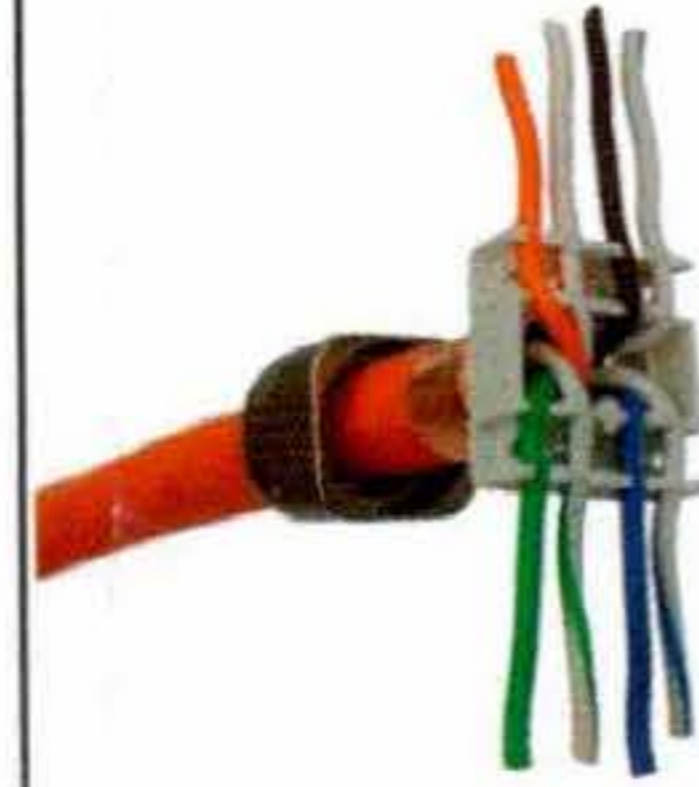

3、 Configure 568A or 568B according to the wiring requirements and thread them into the corresponding wire slot.

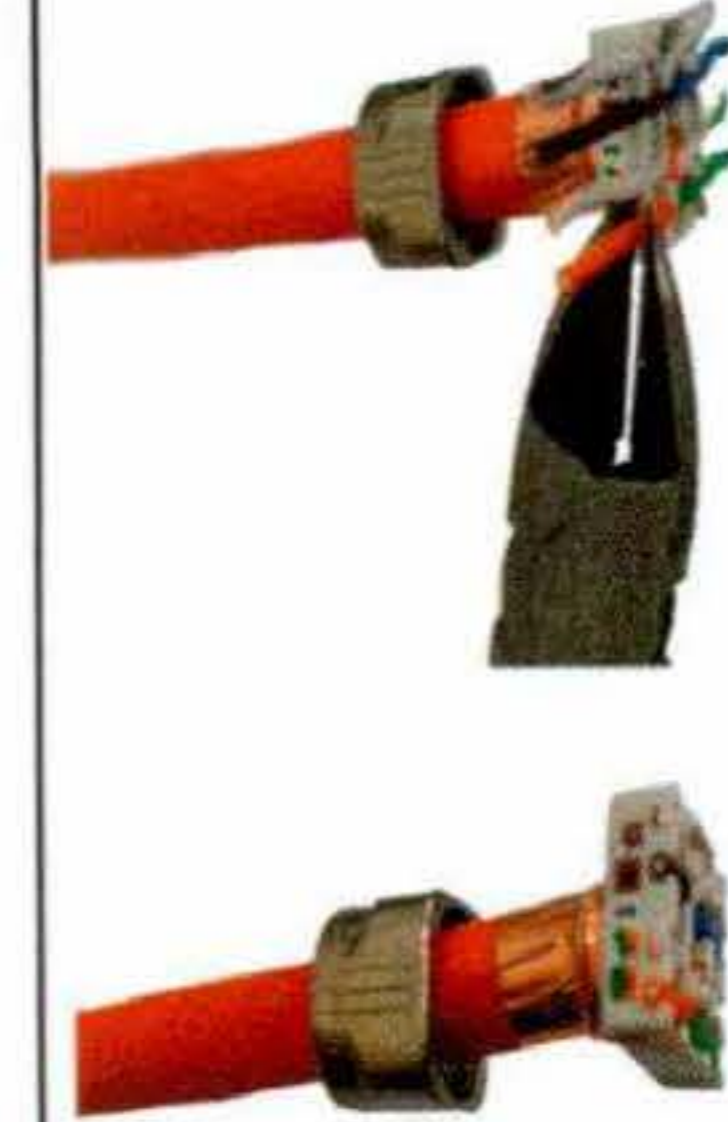


4、 Cut excess cables and ensure that no cables protrude beyond the plastic cover of the pressure line.




5、 Align the wire cover according to the terminal position and then press the wire cover in the correct position.



6、 Close the left and right part of the keystone jack.

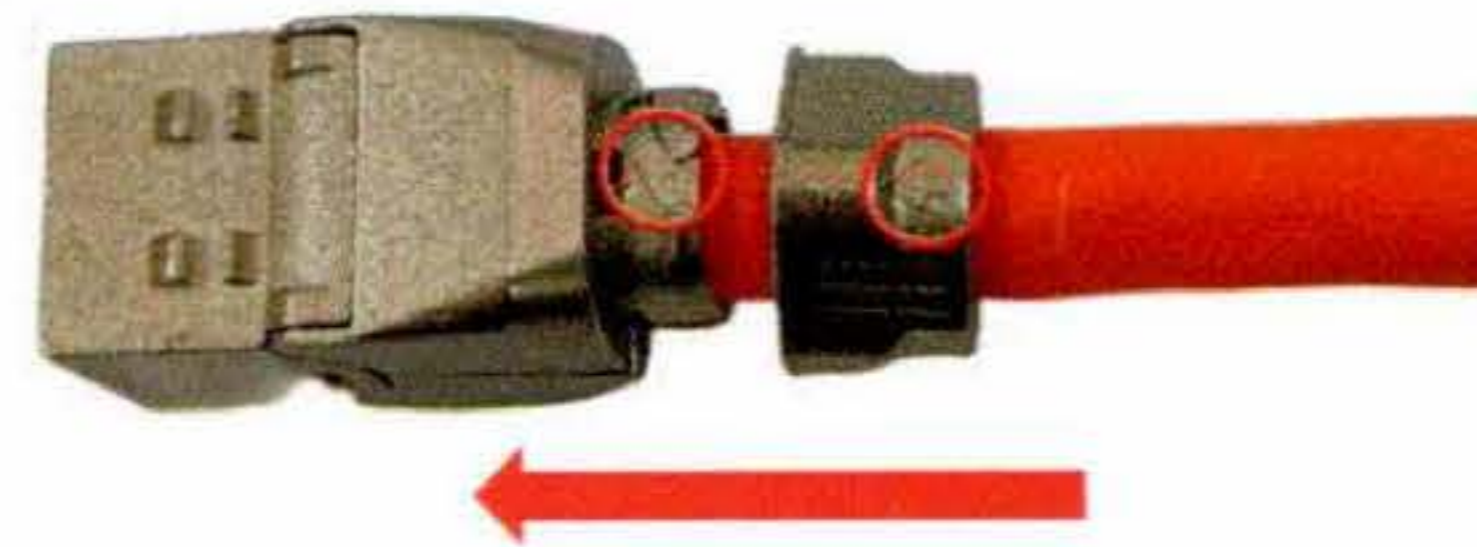

7、 Align the arrow on the nut with the arrow at the end of the plug, and then push the nut.

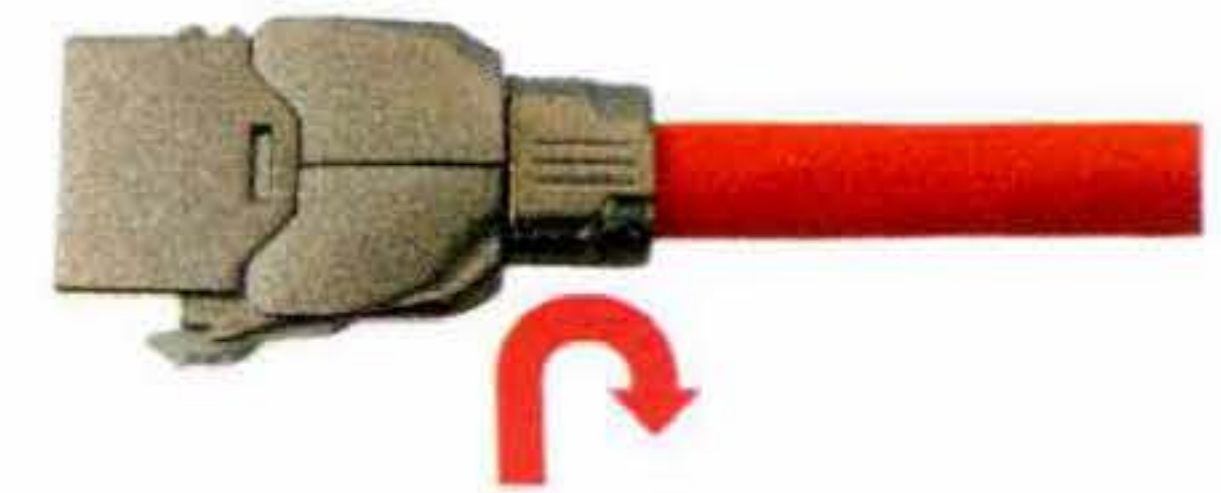

8、 Lock the nut by turning it to the right.