


A (x1)



B (x1)




C (x2)



D (x4)  
ST3.9x16




1



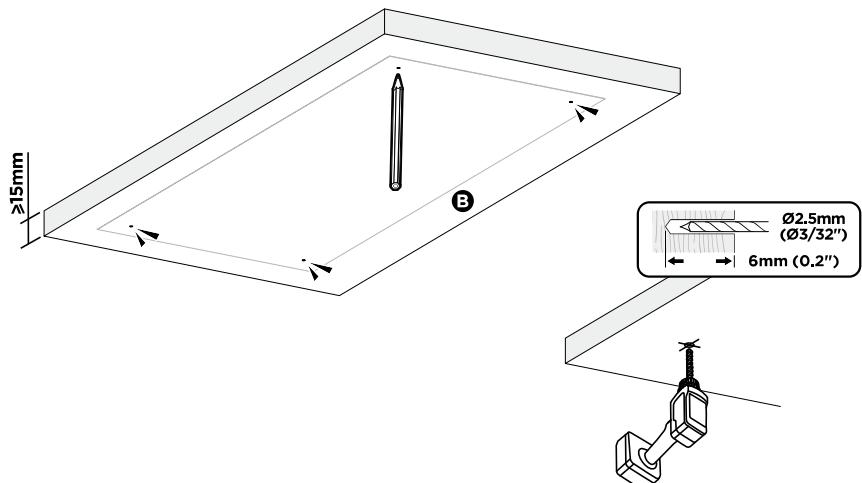


3

Snap two rear ends into the notches with a click, and guide the tray to attach the bolts to the holes.

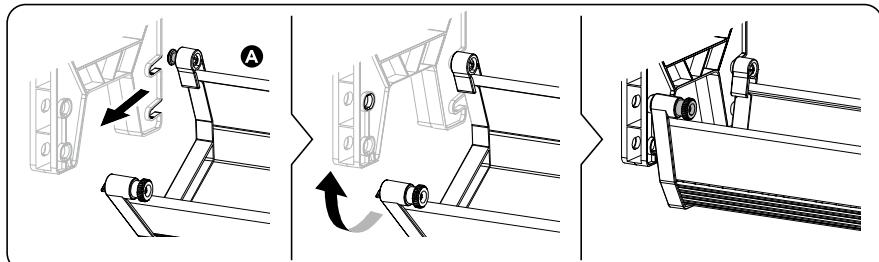

2

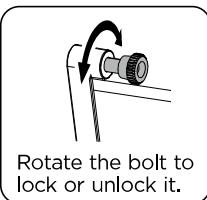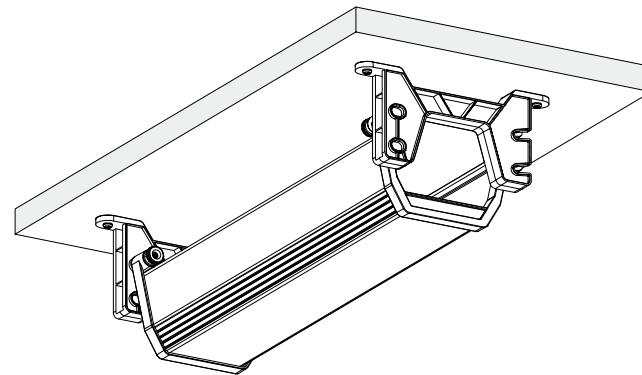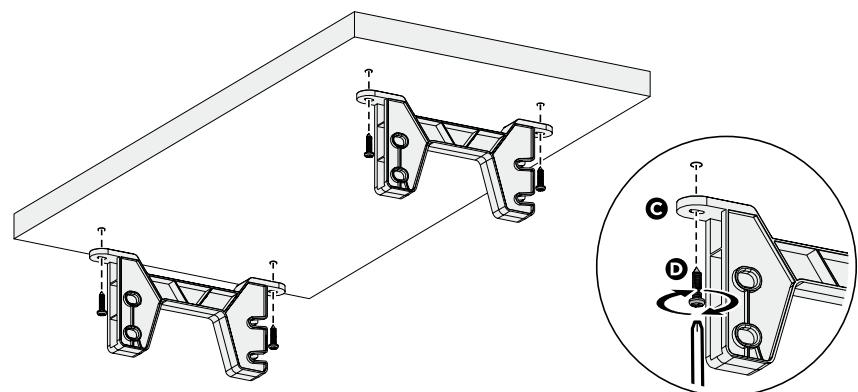

Rotate the bolt to lock or unlock it.

To take out the tray, pull out the bolts and push the tray to remove it from the notches.

