


21173095 Short shielded modular plug component CAT.6A


Installation instructions

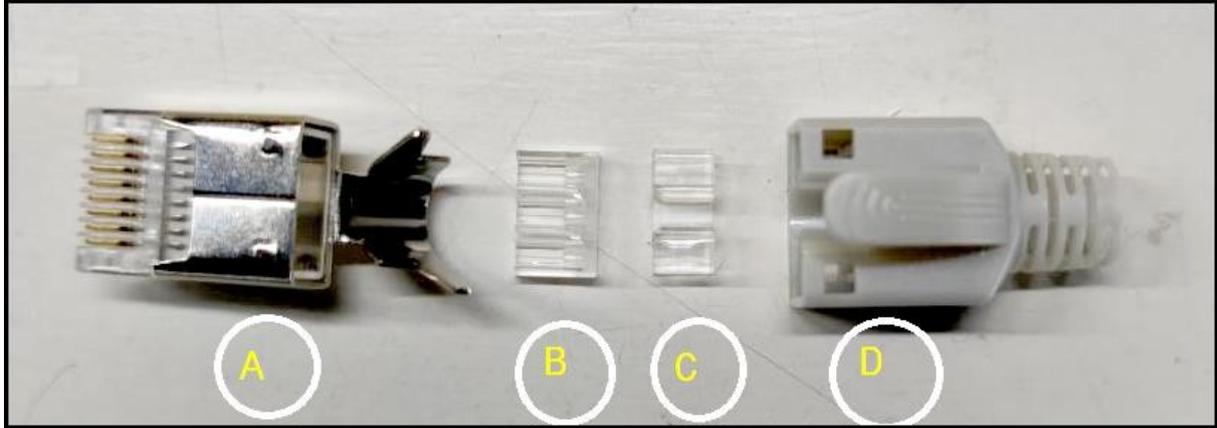


1. The different parts of the plug.




2. Feed the cable through sleeve D and strip approx. 30 mm of the outer sheath of the raw cable.

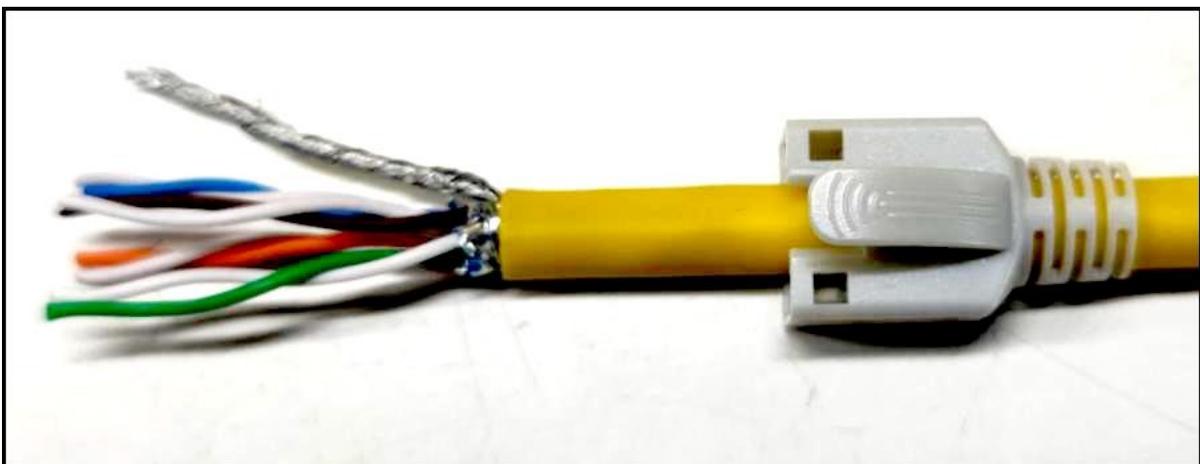

3. Twist the braid into a single wire and strip the insulation from the aluminium foil.

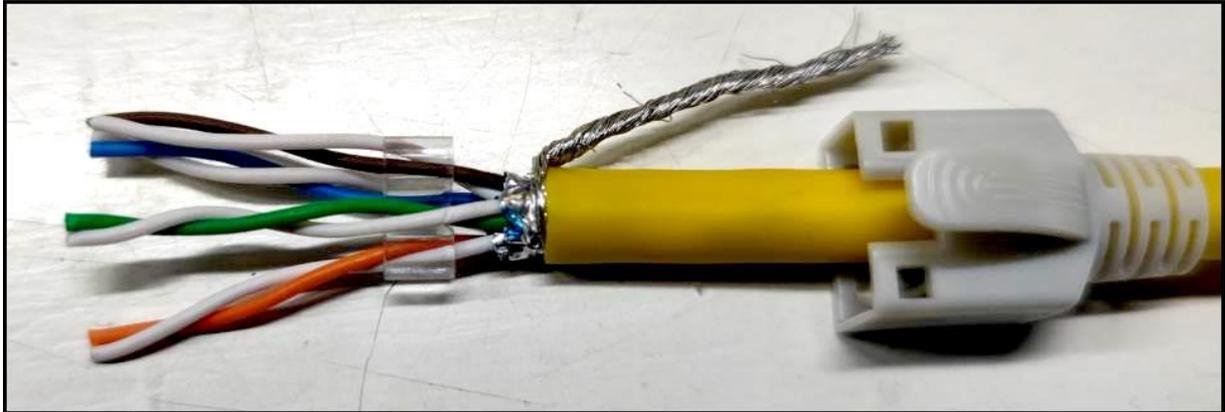

4. Insert each pair of cables into the 4 grooves of guide C (do not undo the twisting) (orange pairs and brown pairs in 2 of the grooves on the left and right) green pairs and blue pairs in the top and bottom 2 grooves)

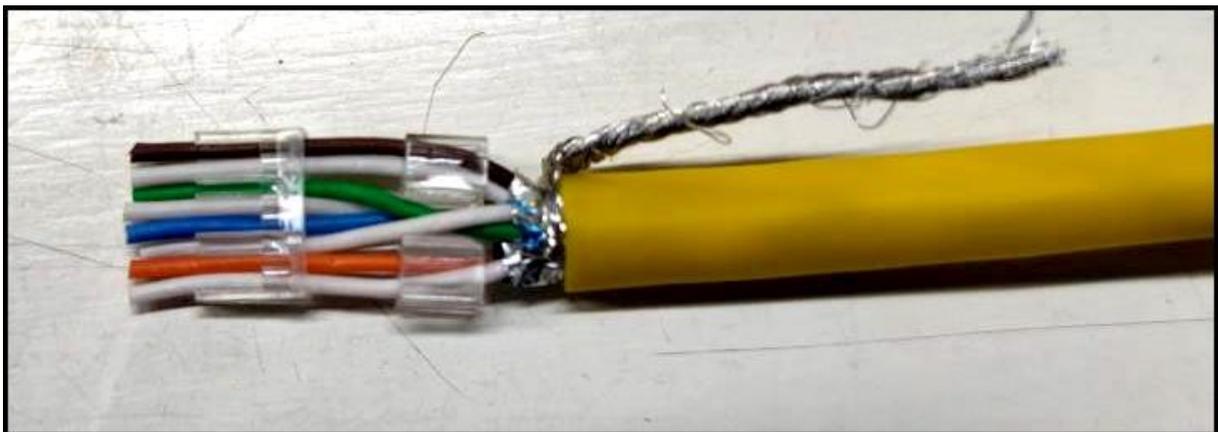


5. Insert the wires into cable guide B according to the T568B or T568A assignment.




6. Push the cable in guide B to the end, cut off the protruding wire (here the assignment is according to T568B).




7. Insert the cable with both guides B and C into connector A.

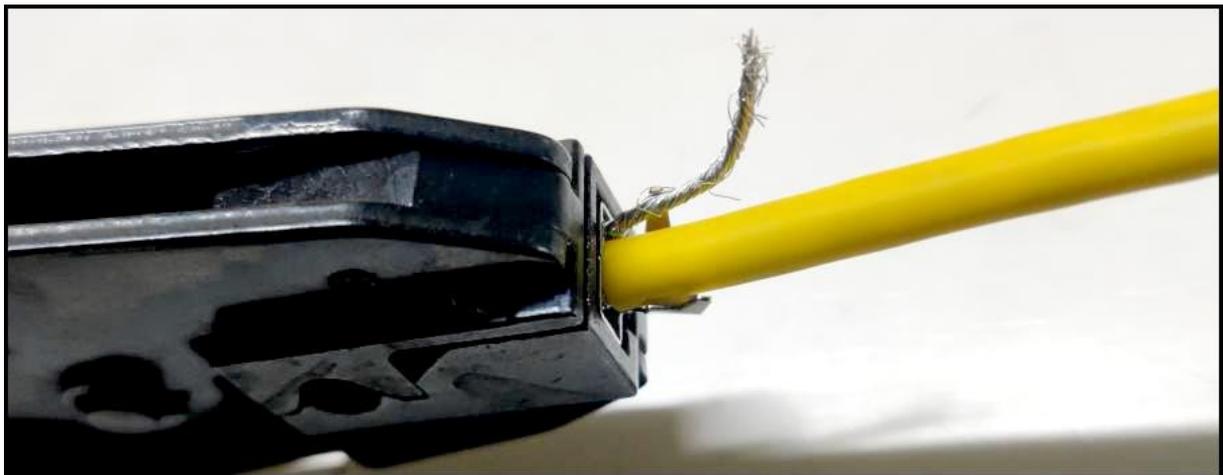


8. Crimp connector A with the crimping pliers.

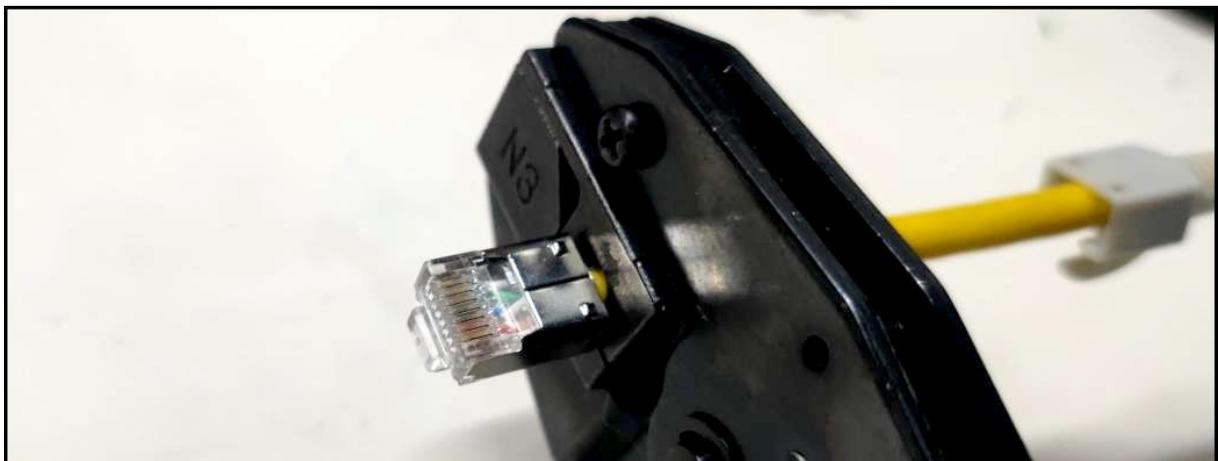


9. Crimp the dovetail clamp with the pliers tool.

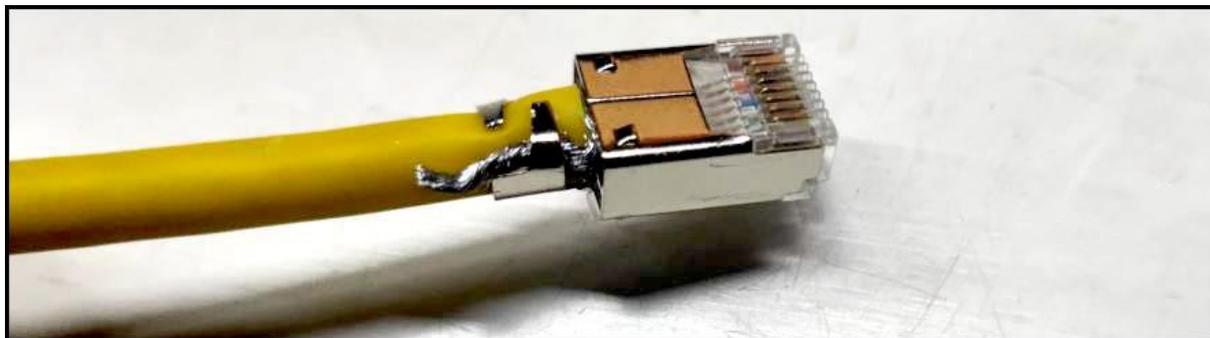

10. Check clamping result.

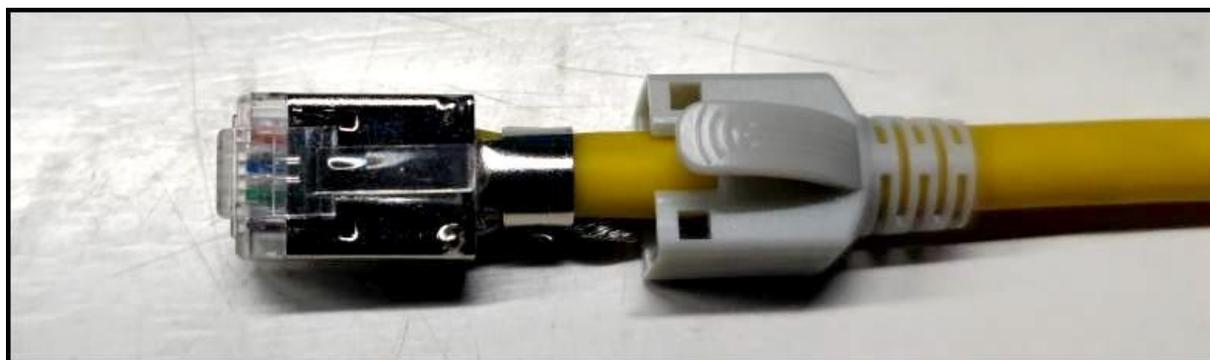

11. Push the sleeve D onto the plug A.

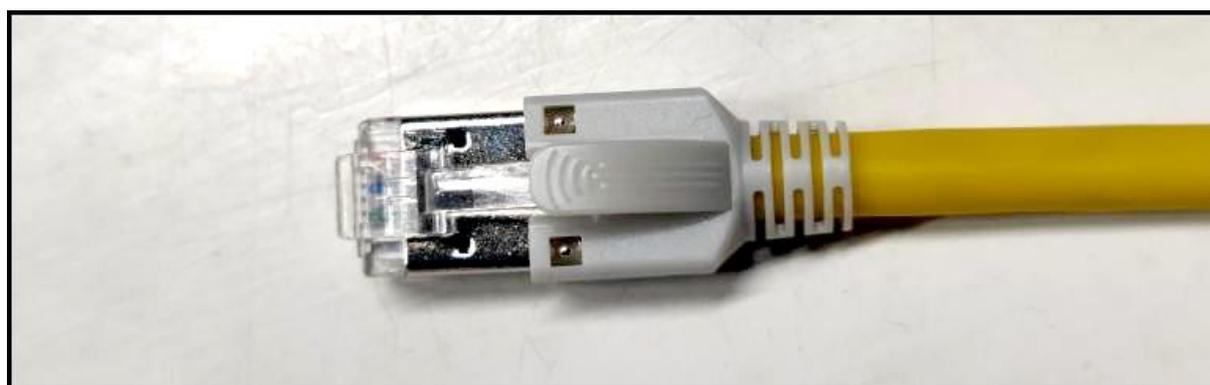

12. End product.