

Installationsanleitung/Installation guide

Keystone Jack DIN RAIL HOLDER




①.Stripping 4cm of sheath.




③.Paste copper foil on the braided and ground wire, cut off the excess weave and the ground wire.




⑤.Across the termination cap by the color marks of T568A or T568B.

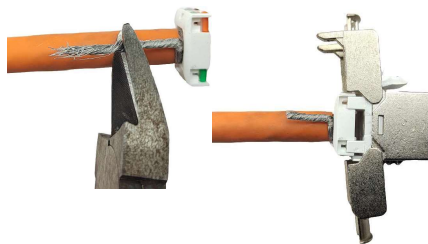

⑦.Trim the excess braiding, install the termination cap in direction of arrow into the keystone jack.

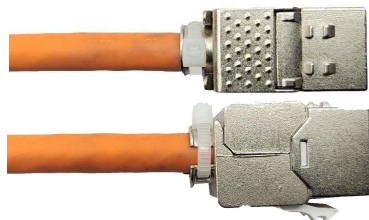

⑨.Fasten cable ties for shielding.

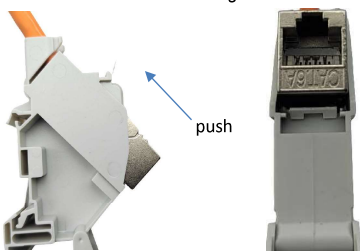

⑪.Keep the spring of keystone module facing downwards, push it upwards, then you will hear a "click" sound, the installation is completed.



②.Foldback braided and drained wire.




④.Fan out all four twisted pairs, allocate each by following colorcoding label.



⑥. Allocate each conductor into proper slots on wiring cap by following color coding, then trim the the ends of conductors.



⑧.Press both covers of the keystone jack to contact the cable.

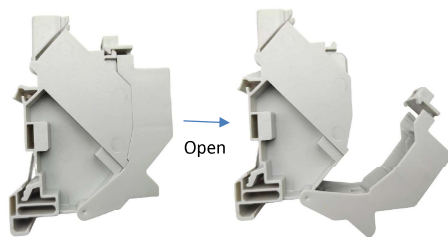

⑩.Open the DIN Rail holder.



⑫.Close the DIN RAIL holder to complete the installation.